

Electric Adjustable Frame Operating Instructions

Thank you for choosing our motion electric height adjustable desk. These electric desks have infinite adjustment between 625 mm high and 1250 mm high.

There are two (2) ways to set the height of your desk:

Manually by using the up and down arrows, or

Input up to four chosen pre-set heights using the number settings 1, 2, 3 & 4

Manually

Push either the up or down 'arrow' button and hold until your chosen height is obtained, then release the 'arrow' button.

Caution when adjusting the height be careful that the area below or above the desk top is clear from any obstructions such as under desk storage or overhead shelving.

Preset

- a) Manually set your chosen height using up and down 'arrow' buttons.
- b) Press the 'S' (store) button. 'S' will now appear on the digital read out screen.
- c) Then press a 'preset' number. (You have approx. six (6) seconds to input number or the screen will return to numerical readings)
- d) Preset height is now set.



You can set your desk up to four (4) preset heights.

Caution when adjusting the height be careful that the area below or above the desk top is clear from any obstructions such as under desk storage or overhead shelving.

Should any problems arise please do not hesitate to contact

Bevisco Commercial Interiors on (02) 9821 4441

Vystan Interiors T (08) 89417774 | E sales@vystan.com